
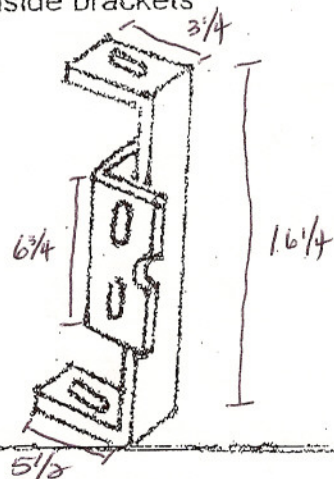


2006 Dodge Wrap 1/2" ton.


Part # 1217

- 6.- 1/2 X 2 Bolts
- 8.- 1/2 Nut
- 8.- 1/2 Lock Washer
- 16.- 1/2 Flat Washer

- STEP 1 Remove inside factory nuts between the frame as shown: place the short side to the top
- STEP 2 Place zee brackets to the grill guard tap place grill guard to the front end of your truck and bolt zee bracket to the top of the inside bracket.
- STEP 3 Place bottom bracket on the side of the upright, so you be able to mark and to cut a hole on the plastic guard, then bolt to grill guard and the bottom inside brackets
- STEP 4 Check alignment on the grill guard and tighten bolts.
- STEP 5 You may need to periodically re-tighten bolts.

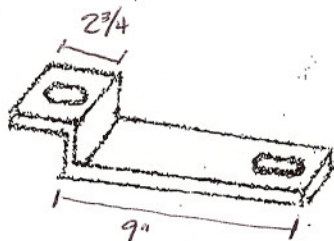

Grill Guard Mount

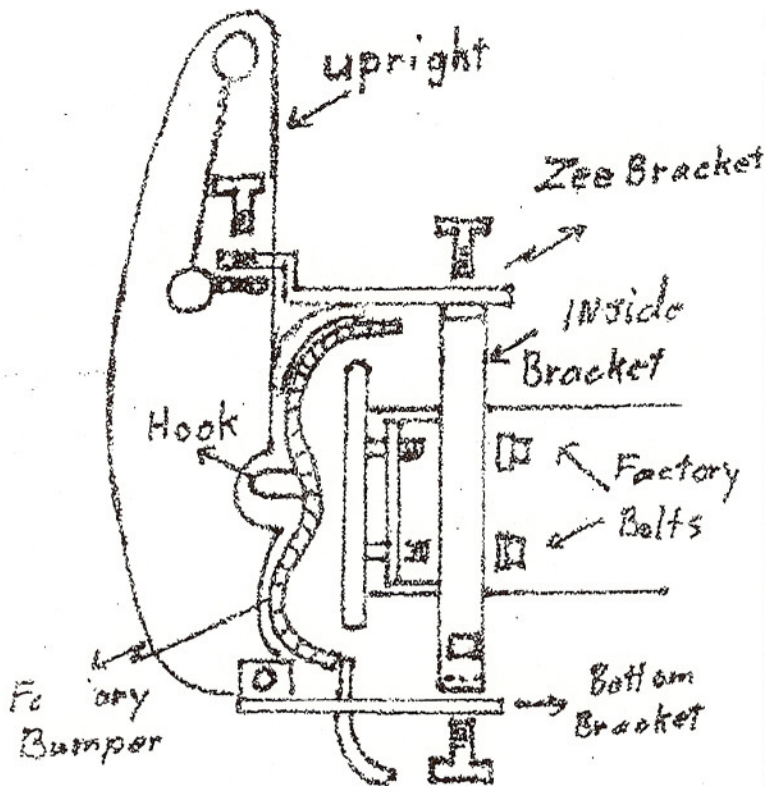

IN SIDE Bracket Mount

