


INSTALLATION FOR PART NO. 1218 2009 DODGE 1500 RAM -NO TOW HOOKS GRILLGUARD

- 8 - 1/2 X 1 1/2 bolts
- 6 - 1/2 x 2 bolts G8
- 2 - 125 X 12M X 1.5
- 14 - 1/2 nuts
- 26 - 1/2 flat washers
- 14 - 1/2 lock washers

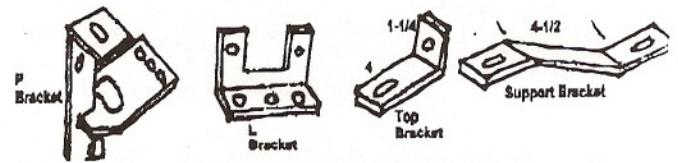

Step 1: Cut an opening on the plastic where the tow hook would be. Then remove the factory bumper nuts and place the L bracket as shown and bolt on.

Step 2: Place the P and the R brackets under the L bracket. Place the support bracket under the P + R bracket and bolt on to the back frame support as shown.

Step 3: Place top bracket under the plastic and bolt on to the metal bumper and also bolt bracket to the top of the P and R bracket as shown.

Step 4: Attach grill guard to the P and R bracket. They should mount to the inside of the upright.

Step 5: Check alignment and tighten bolts. You may need to periodically retighten the bolts.

