
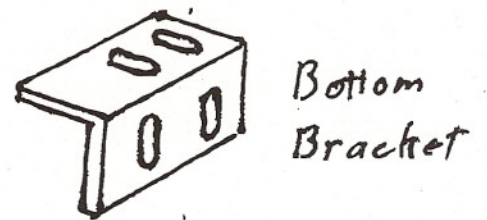


2004 TOYOTA TUNDRA


- BOLTS:** 10-1/2 X 1/ 1/2" BOLT
 10-1/2" NUT
 10-1/2" LOCK WASHER
 20-1/2" FLAT WASHER

1610

- STEP # 1** OPEN THE HOOD AND BOLT TOP BRACKETS TO THE INSIDE PANEL HOLE AS SHOWN.
 NOTE: TOP BRACKETS A LEFT AND RIGHT.
STEP # 2 REMOVE TOW HOOKS FACTORY BOLT PLACE BOTTOM BRACKET AND TOW HOOKS AND BOLT ON WITH THE SAME FACTORY BOLTS AS SHOWN.
STEP # 3 BOLT GRILL GUARD TO THE BOTTOM BRACKET AND TO THE TOP BRACKET AS SHOWN.
STEP # 4 CHECK ALIGNMENT ON THE GRILL GUARD AND TIGHTEN BOLTS.
STEP # 5 YOU MAY NEED TO PERIODICALLY RETIGHTEN THE BOLTS.

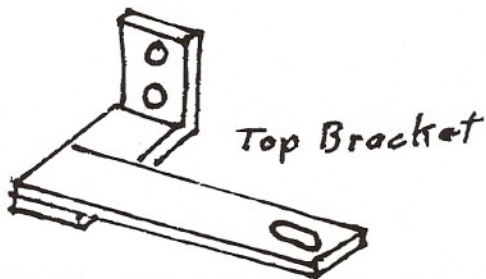

Grill Guard mount

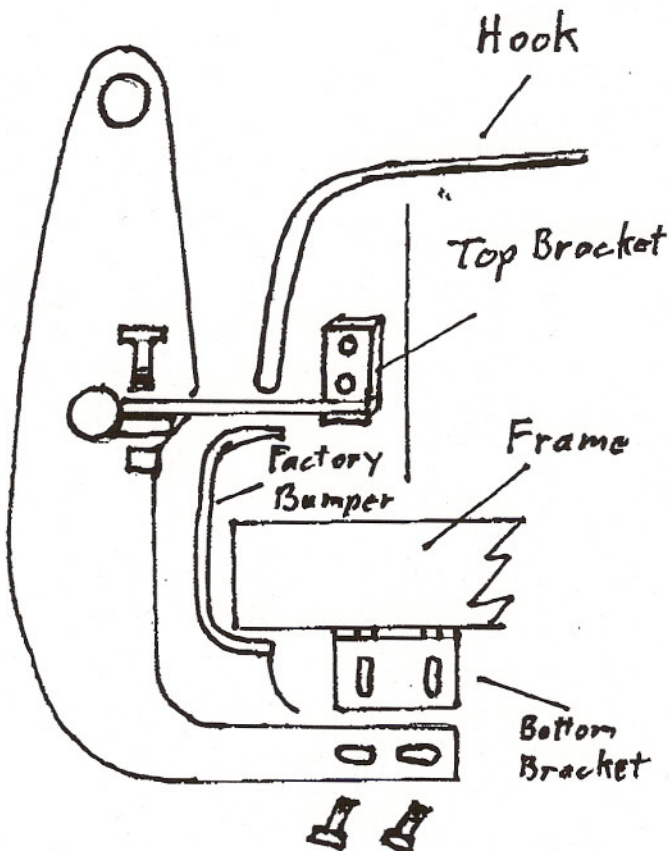

Bracket mount

