


GAGE FRONT END REPLACEMENT MOUNTING INSTRUCTION

FOR

#2300 # 2305 - 99-04 SD

2340 # 2345 - 05 SD

1. Remove Front Bumper.
2. Remove Tow Hooks.
3. Note: You need to put bolts where Tow Hook Bolts were as shown:

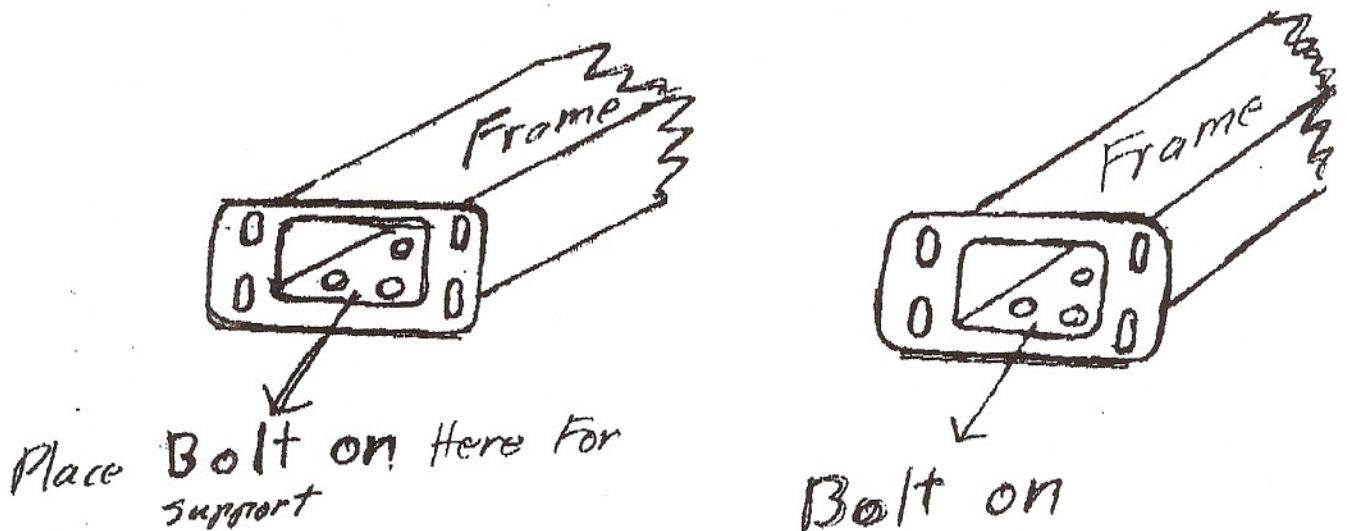

4. Bolt on Replacement to Frame Bracket as shown:

