


GAGE GRILL GUARDS
MOUNTING INSTRUCTIONS
#1110 & #1410 CHEVY&GMC ½ TON 99-02

1. Bolt angle brackets on the inside between bumper and frames as shown **AA**.

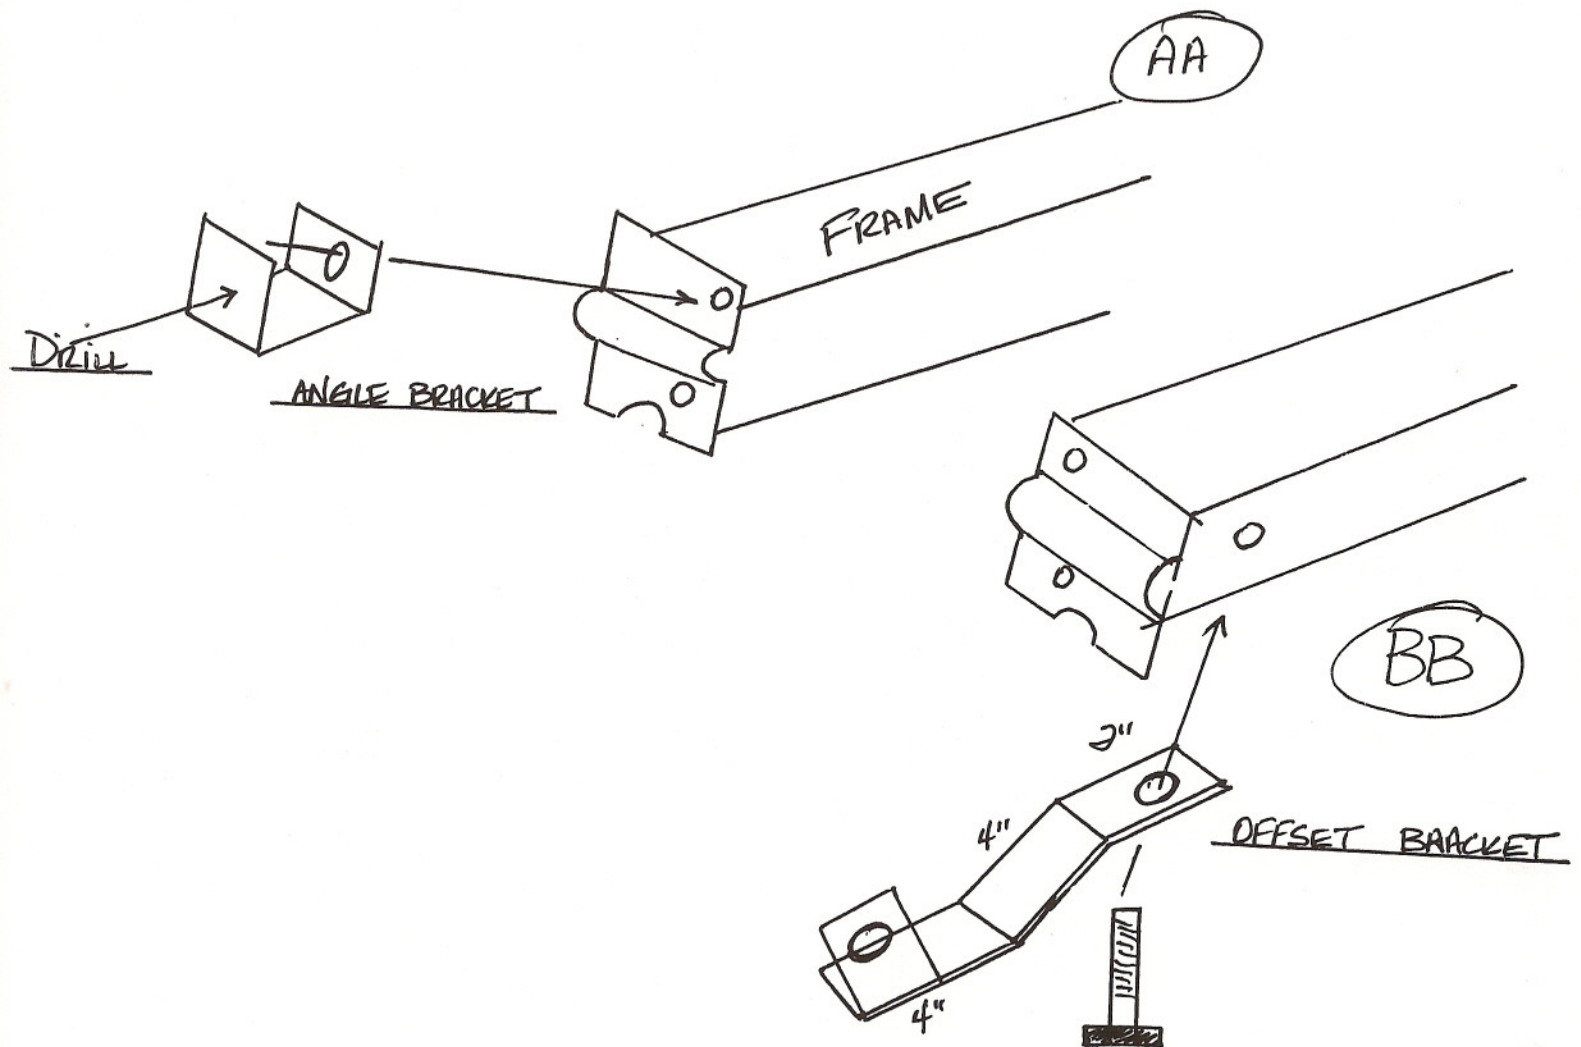

2. Center grill guard to front end. Mark holes and drill holes. Bolt on grill guard.
3. Bolt offset brackets to frame and to grill guard as shown **BB**.