

WILL NOT ACCOMMODATE TOW HOOKS

1. Remove tow hooks (if applied). Use 18mm and 21mm sockets to remove.
2. Remove the plastic insert that covers the tow hook opening. On tow hook models remove the plastic cover that sits around the tow hook.



3. Loosen the 18mm bolt that goes through the frame to the body mount. On tow hook models, cut off the rubber boot from around the bolt.




4. There is a driver and passenger side mounting bracket (see below). Slide the bracket through the front of the opening and line up to the bolt and hole of the bottom of the frame.



- 5.

5. Install the provided metric bolt with a washer through the front frame hole.
6. For the back hole, use one large and one small spacer washer. Place over the factory bolt and hand tighten.
7. There is a driver and passenger support bracket (see below).

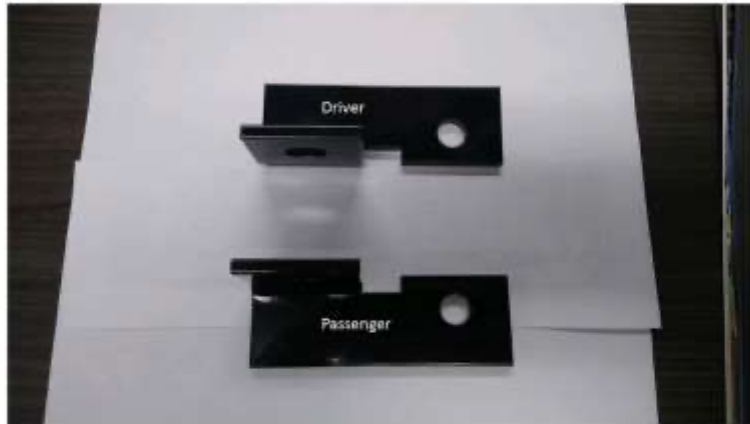

8. Mount the support bracket to the bottom hole of the bumper bracket. Mount the other side to the mounting bracket. Use 1/2" hardware to install. See photo



9. Mount the grille guard to the mounting bracket. Use 1/2" carriage bolts to install. Leave loose.
10. Center grille guard side to side. You may adjust the mounting brackets until centered. Once centered, tighten mounting bracket bolts.
11. Tilt the grille guard back or forward to line up the loops to the headlights. Once lined up tighten carriage bolts.

MAKE SURE ALL NUTS AND BOLTS ARE TIGHT